



# spenky<sup>®</sup> growth stick installation


DO NOT INSTALL IN BATHROOMS OR ROOMS WITH HIGH LEVELS OF MOISTURE

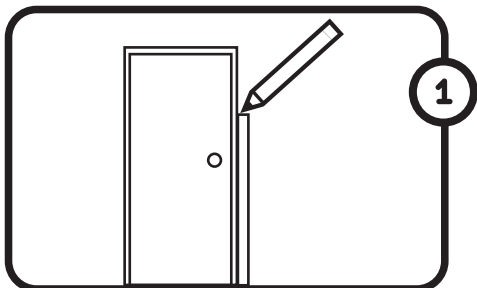


Select a suitable door frame. Stand the Spenky™ Growth Stick beside the door frame

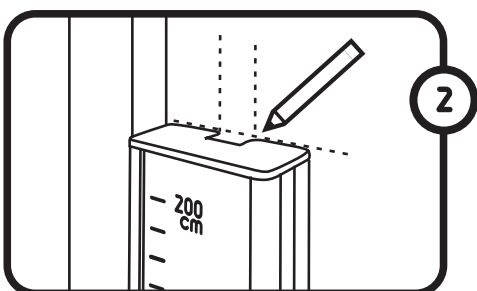


Mark the position of the hook with a pencil.

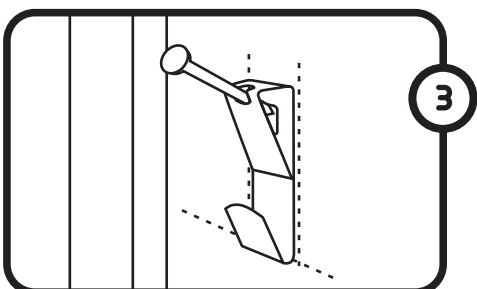

Attach the picture hook

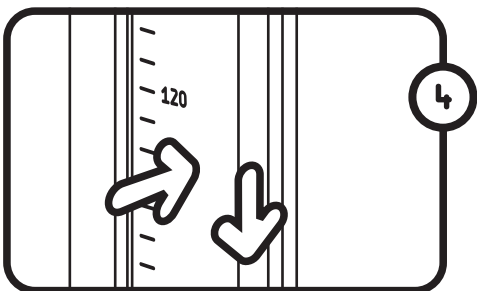

Hook the Spenky™ Growth Stick onto the picture hook.

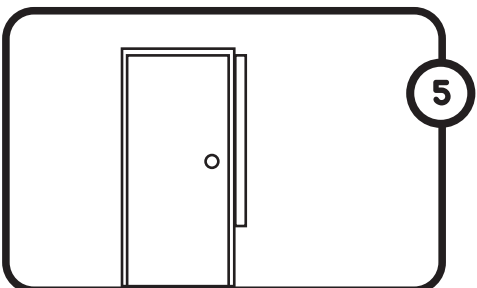

Finished!